


Fluidose™ Series 5 Unit Dose Packaging System for Liquids

Medical Packaging Inc. (MPI)'s **Fluidose Series 5** unit dose pharmacy packaging system for liquids.

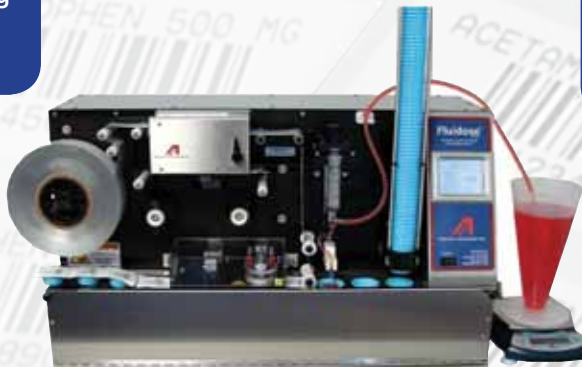

Automatic low fluid detection; machine pauses packaging when fluid level reaches preset limit.

Two filling options available: Syringe Pump or Optional Baxa Pump.

Improved "ease of use". Purge feature cancels label and clears the system for next packaging job.

Packages an average of 15 doses per minute dependent upon fill rate in 3 different cup sizes – 15, 25 or 35 ml.

Provides a single, bar-coded, unit-dose package to the bedside.

Provides quieter operation and disposable FDA grade tubing.

Decreases packaging costs, increases operational efficiency and reduces medication errors.

Touch screen control panel allows for quick and easy access to control packaging system operations.

MPI's **Fluidose Series 5** offers a high-quality, affordable liquid unit dose, bar coding packaging system, coupled with improved functionality and MPI's exclusive Pak-EDGE™ Barcode Labeling Software, to provide you with the optimal high performance pharmacy packaging solution to meet your liquid packaging needs and comply with regulations applicable to all classes of trade for dispensing liquid medication.

Technical Specifications	
Dimensions:	32" L x 14" W x 18" H
Weight:	125 lbs.
Power:	115VAC, 60Hz, 500VA 220VAC, 50Hz, 400VA
Sealing Temp:	215° ± 5° C
Rate:	Average 15 Doses/Minute

Standard Fluidose ships with syringe pump; optional Baxa® pump available at additional cost.

Automatic packaging of bulk liquid medication into unit dose is than buying bulk liquids prepackaged by the manufacturer.

provides up to twelve-month expiration from the date of packaging. Color cups available for easy identification of controlled or refrigerated medications.

All MPI packaging systems require the use of MPI authorized disposable materials.



Medical Packaging Inc. • 470 Route 31 • P.O. Box 500 • Ringoes, NJ 08551
Toll free. 800.257.5282 | Fax. 609.466.3775 | www.medpak.com

Fluidose and Pak-EDGE are trademarks of Medical Packaging Inc.